

# OUTERIMPACT


## S&W M&P M.R.A. (Modular Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

**WARNING:** Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.


**Step 1:** Remove existing rear sight from slide

**Step 2:** Install OUTERIMPACT dovetail onto slide.

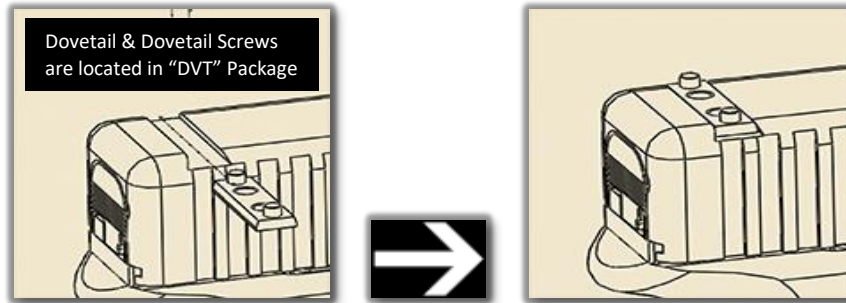

**Step 3:** Test fit the Red Dot sight to Outerimpact adapter, utilizing adjacent chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

**Step 4:** Secure sight adapter to dovetail with supplied weaver screws. Torque to 25 in/lb.

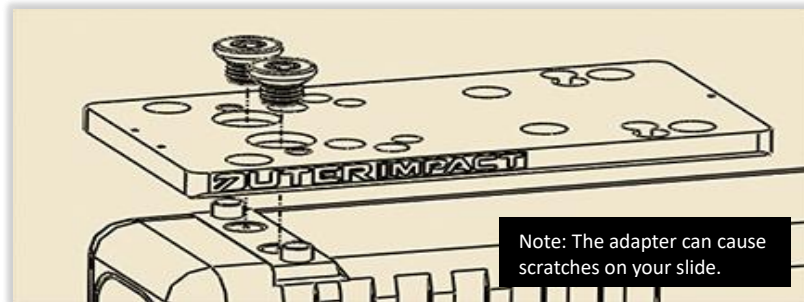

**Step 5:** Using the screws/pins and the mounting pattern identified, mount the Red Dot sight adapter and torque to 12 in/lbs

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used
<ul style="list-style-type: none"> <li>The <b>RED</b> circles indicate locations for 2 included alignment pins</li> <li>The <b>BLACK</b> circles indicate locations for mounting screws -- Torque to 12 in/lb.</li> </ul>			
	Vortex Burris UTG TrueGlo	Viper Fast Fire 3 Reflex Micro Dot	M3 x 8
	Burris Doctor Insight Eotech	Fast Fire 2  MRDS MRDS	M3 x 6
	Vortex	Venom	M3 x 6
	Trijicon	RMR	#6
	Holosun	507c	Additional Screw Purchase Required
	Leupold	Delta Point Delta Point Pro	Sight Supplied Screws work
	Shield	RMS	Additional Screw Purchase Required
	Vortex Sig Sauer CMORE	Razor Romeo 3, MAX, XL RTS & STS	M4

Note: The adapter has an intentional curve. This curve will flatten out when mounted.

Utilize liquid thread locker upon final installation of all threaded fasteners