



WWW.ARKENOPTICS.COM



EP-5 OWNER'S MANUAL

➤ 5-25X56

WWW.ARKENOPTICS.COM

Our Mission:

Arken Optics products are designed to combine quality, performance and precision with tremendous value. The EP is a FFP (First Focal Plane) optic that features Japanese ED glass to enhance clarity and minimize dispersion. The Arken EP is outfitted with our AZS (Arken Zero Stop) and incorporates adjustable elevation and windage turrets with tactile and audible clicks. These turrets are 10 MIL/25 MOA per revolution.

SPECIFICATIONS:

Magnification: 5-25x
 Objective Diameter: 56 mm
 Eye Relief: 3.4 inches
 Field of View: 25.3-4.9 ft@100 Yards
 Tube Size: 34 mm
 Turret Adjustment: 1/10MIL (1/4 MOA)
 Reticle Position: First Focal Plane
 Reticle Details: VPR MIL (VPR MOA)
 Zero Stop: AZS Zero Stop System
 Zero Reset: Yes
 Elevation Adj. Range: 32MIL (110 MOA)
 Windage Adj. Range: 16MIL (55MOA)
 Adjustment Per Revolution: 10MIL (25 MOA)
 Parallax: Side Parallax Adjustments, 25Yds-Infinity
 Illuminated Reticle: Red
 Turret Rotation: Counter Clockwise (CCW)
 Length: 14 inches
 Weight: 39.2oz



Arken Zero Stop (AZS) & Turret Alignment

The **Arken Zero Stop (AZS)** allows the shooter to quickly and consistently return the elevation turret back to the sight in distance (or zero). Please use the 2mm allen wrench to loosen the **AZS Set Screw** on the elevation turret and raise the **AZS Zero Stop**.

1. 'Slip' the turrets: (For both Elevation & Windage Turrets)

Hold the turret in place to ensure the turret does not move during this process. Please use the 2mm allen wrench to loosen the **THREE** turret cap retaining screws on the **SIDE** of the turret. This will allow the turret to spin freely without rotating the internal components of the turret.

2. Set Turrets to Zero "0":

Rotate the turret cap to align the "0" indicator mark of the turret cap with the indicator mark on the scope tube. Carefully, tighten the **THREE** retaining screws on the **SIDE** of each turret cap.

3. Set the AZS (Arken Zero Stop)

Rotate the turret **UP** 2 clicks. Gently, turn the AZS located on **TOP** of the elevation turret clockwise to lower until you feel the AZS bottom out. Then, loosen the AZS a quarter turn to alleviate any tension. Finally, tighten the AZS Set Screw against the AZS.

4. Rotate the turret back to Zero "0".

AZS IS SET. You should have a firm stop that allows you to consistently return to zero.

The Subtension Scale: MIL or MOA:

Depending on which version you have purchased, your EP-5 riflescope will feature elevation/windage adjustments and reticles scaled in either MOA or MRAD (MIL). If you are unsure of which scale you have, reference the top of the elevation turret. Both unit of arc scales are effective at ranging and/or adjusting for bullet trajectory. For best results, the user must understand either system being employed. We recommend understanding both.

MRAD (Milliradian): 1/1000th of 1 radian of arc

1 MIL = 3.438 MOA

1 MIL = 3.599 inches @ 100 yards

1/10 MIL = 0.359 inches @ 100 yards


MRAD							
100 yd	200 yd	300 yd	400 yd	500 yd	600 yd	700 yd	800 yd
3.6"	7.2"	10.8"	14.4"	18"	21.6"	25.2"	28.8"

MOA (Minute of Angle): 1/60th of 1 degree of arc

1 MOA = 1.047 inches @ 100 yards

1/4 MOA = 0.261 @ 100 yards.

MOA							
100 yd	200 yd	300 yd	400 yd	500 yd	600 yd	700 yd	800 yd
1"	2"	3"	4"	5"	6"	7"	8"

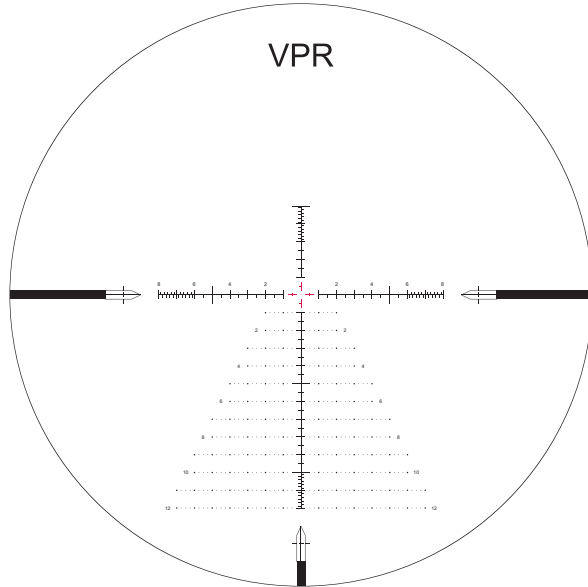

Reticle Focus Adjustment:

To adjust reticle focus, rotate the Reticle Focus Ring while looking at an unobstructed background. The eye will continually refocus, so this should be done in short bursts. Look away between each adjustment. The reticle should be sharp and should not appear to move with small head adjustments. Once properly set, the eye should not have to work to get the reticle in focus.

Parallax Adjustment:

To eliminate parallax, rotate the Parallax Adjustment Turret. Proper adjustment will eliminate all reticle movement within the eye box.

Variable Power Adjustment:

To obtain the desired magnification, rotate the Magnification Ring so that the indicator on the Ring corresponds with the magnification power level on the ocular housing.

